



YASKAWA Energy-Saving Unit

Power Regenerative Unit

R1000

200 V Class, 3.5 to 105 kW
400 V Class, 3.5 to 300 kW

R



Certified for
ISO9001 and
ISO14001



JQA-0422 JQA-EM0498

Energy Is Generated!

Even During Operation

Machines actually generate energy.

Unfortunately, this energy is discarded as heat by braking resistors.

Just replace those braking resistors with the R1000 to effectively use the energy that you have been throwing away.


After you've already tried everything else to save energy, let the R1000 show you a new way.



Power Regenerative Unit
R1000



Reuse the Previously Wasted Energy with a New Way to Save Energy

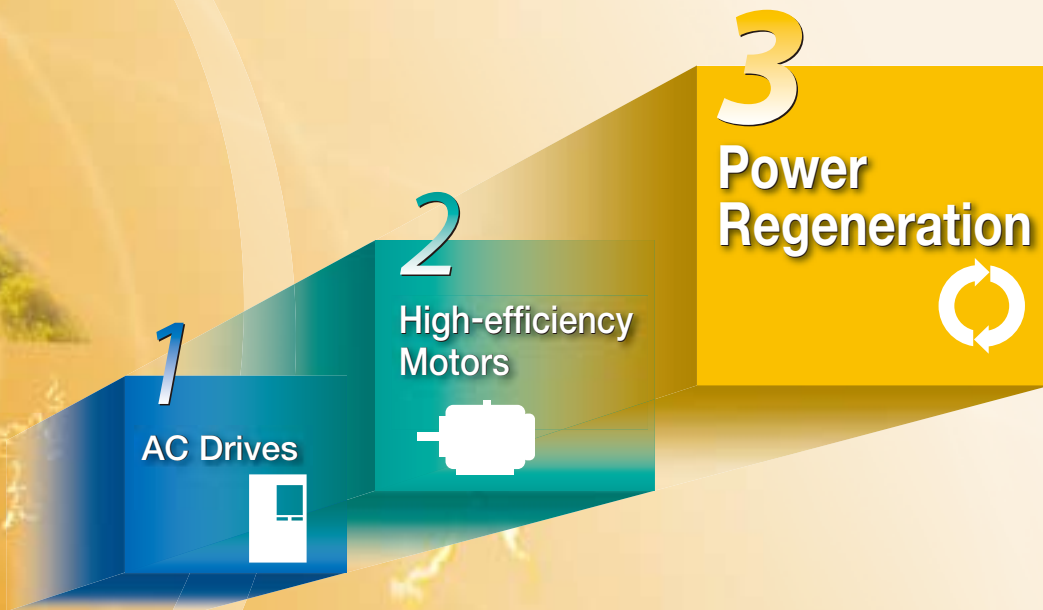

Save electricity with power regeneration !

More Braking Power !

Machine Downsizing !

Total Cost Reduction !

CONTENTS

Features	4
Application Examples	6
Applicable Models	7
Standard Specifications	8
Selecting the Capacity	9
Connection Diagram	10
Terminal Functions	11
Dimensions	12
Fully-Enclosed Design	16
Options	18
Application Notes	22
Global Service Network	23

Save ^{Even More} Energy!



Add the R1000 to save even more energy.





Application to a Lift

54%
Energy Savings

(Conditions)
 Rated load : 10 t
 Rated lifting speed : 20 m/min
 Motor used : 45 kW, 4 poles, 1,750 min⁻¹
 No. of lifting/lowering : 25 times/h; 109,500/yr
 (12 h/day for 365 days)
 Electricity costs : \$10/kWh

Replacing Braking Resistors

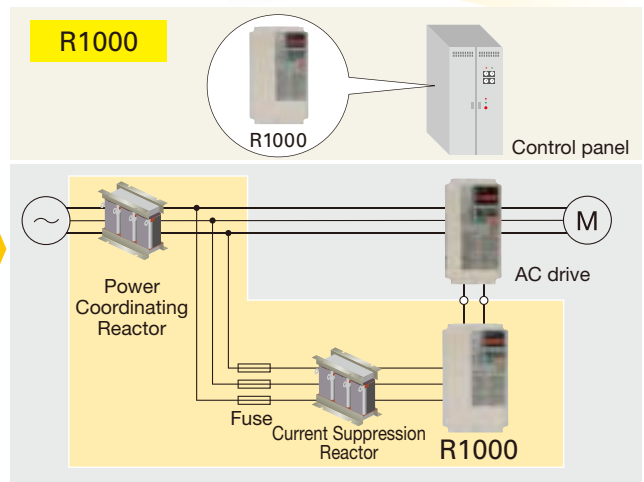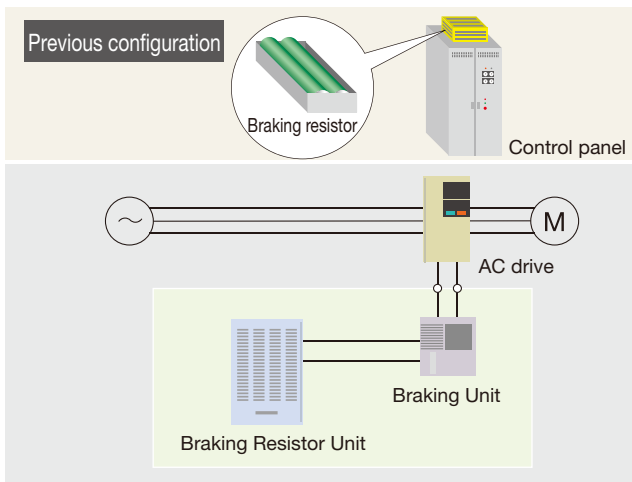


Machines Generate Energy!

Effectively use this energy to save energy!

Did you know? When a motor turns, it consumes energy. But when it is turned by something else, it generates energy.


■ Lifts, such as cranes

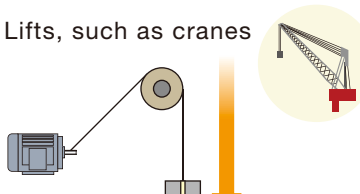

Gravity pulls on the motor when the load is lowered.

Generates energy!


■ Horizontal conveyors, such as dollies

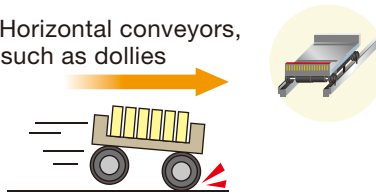

Inertia pulls on the motor when the dolly decelerates or is stopped.

Generates energy!

■ Generators, such as windmills and waterwheels

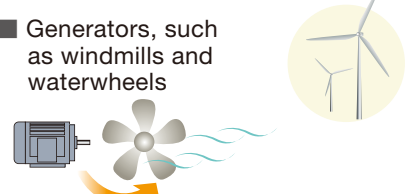

Wind, water, or another external force turns a motor.


Generates energy!

More Braking Power!

Increased braking torque provides more braking power with continuous regenerative operation.


Previous configuration
Example for LKEB4045
125% (10s)

Using the R1000...



R1000

**150% (30s)
High Torque**

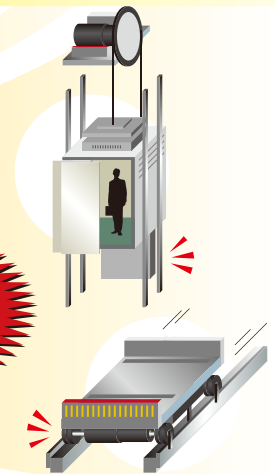


Let Us Meet Your Needs

Energy Savings That You Can See

Visualizing Savings in Electricity

You can use analog outputs and communications networks to easily and visually monitor all sorts of data. Operation is as easy as for a Yaskawa 1000-series AC drive.

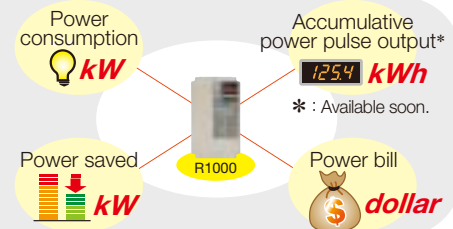

Reliable and Long Life

Ten Years of Durable Performance

Cooling fans, capacitors, and relays have been carefully selected and designed for a life expectancy of up to ten years.*


* : Assumes the drive is running continuously for 24 hours a day at 80% load with an ambient temperature of 40°C.

Preventive Maintenance

Performance Life Monitors

The R1000 is equipped with performance life monitors that notify the user of part wear and maintenance periods to prevent problems before they occur.

●The R1000 outputs a signal to the control device indicating components may need to be replaced.

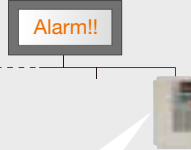

Operator Display	Corresponding Component
LT-1	Cooling fan
LT-2	Capacitors
LT-3	Inrush prevention relay

No Need to Worry Should Problems Occur

Terminal Board with a Parameter Backup Function

The terminal block's ability to save parameter setting data makes it a breeze to get the application back online in the event of a failure requiring unit replacement.



Parameter	Name	Number	Setting
Run Command Selection 1		b1-02	2
Multi-function Analog Inputs(Voltage), Terminal A1 Function Selection		H3-02	10

Easy Support from a PC

Simulation Program for Regeneration Effects

Depreciation simulation gives you an easy way to confirm the cost efficiency of the R1000.



DriveWizard Plus

An indispensable tool for R1000 setup and maintenance.



We Support Global Business

Compliance with Global Standards




RoHS compliant
Restriction of Hazardous Substances Directive

Note: Application pending.

Support for Field Networks

RS-422/RS-485 communications capability with the MEMOBUS/Modbus protocol is a standard feature. And you can mount communications options cards to enable using the main open field networks.



* : Available soon.

Features

Application Examples

Applicable Models

Standard Specifications

Selecting the Capacity

Connection Diagram

Terminal Functions

Dimensions

Fully-Enclosed Design






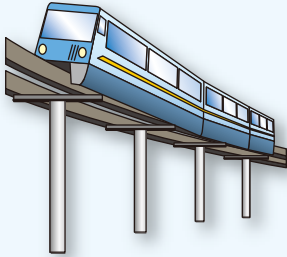
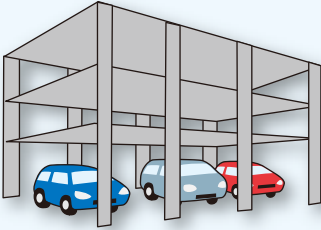
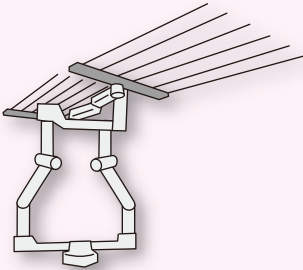
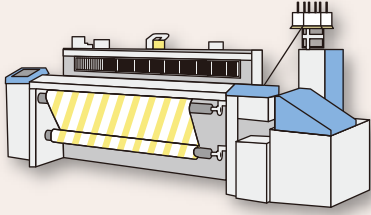
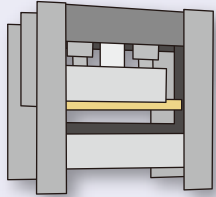
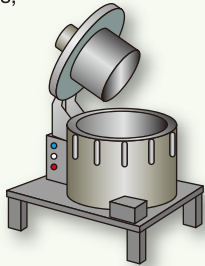
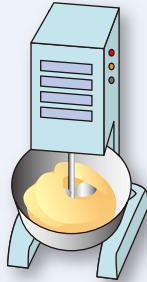
Options

Application Notes

Global Service Network


Application Examples

Saving Energy with Power Regeneration!
Ideal for Machines That Use Braking Resistors.

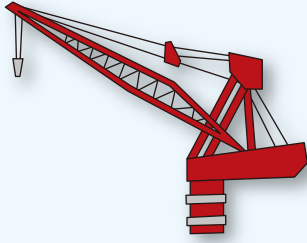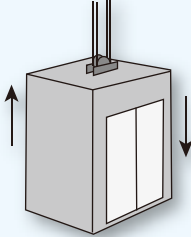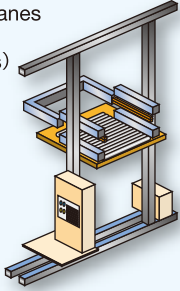
Conveyance Equipment		
<p>Cranes, Hoists, and Chain Blocks</p> 	<p>Elevators</p> 	
<p>Stacking Cranes (Automated Warehouses)</p> 	<p>Escalators</p> 	<p>Automated Vertical Storage System</p> 
<p>Slope Transportation Systems (Monorails and Cable Cars)</p> 	<p>Automatic Parking System</p> 	
Robots	Textiles	Metal Fabrication
<p>Robots</p> 	<p>Weaving Machines</p> 	<p>Presses</p> 
Chemical Plants	Food Processing	
<p>Centrifugal Separators, Decanters</p> 	<p>Mixers</p> 	

Paper Manufacturing and Printers

Winders and Unwinders

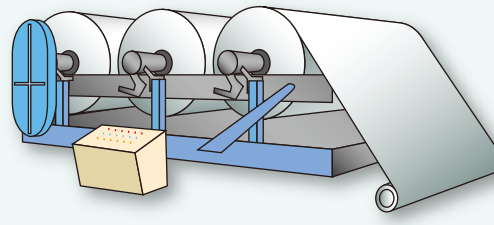


Slitters

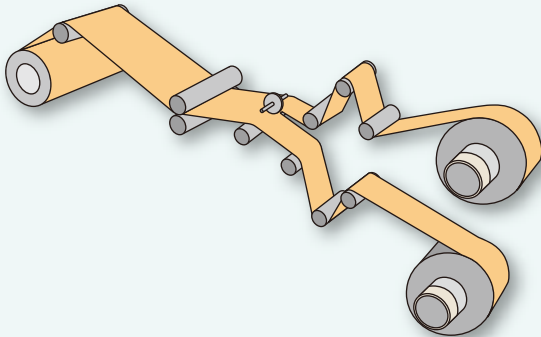


Other

Ladle Turrets

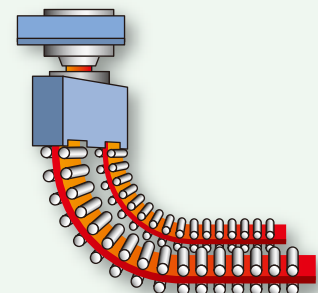



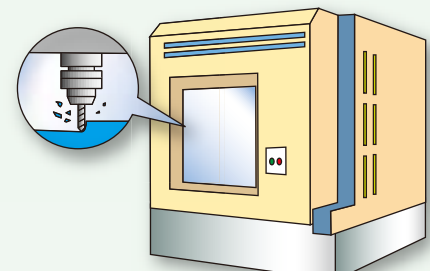


Machine Tools



Applicable Models

The following AC drives and AC Servo drives are recommended. The R1000 can be connected to existing products.

					
High performance vector control A1000	Compact vector control V1000	Compact V/f control J1000	High-function fully vector control Varispeed G7	Elevator applications L1000A	AC servo drives Σ-V SERIES

- Features
- Application Examples
- Applicable Models
- Standard Specifications
- Selecting the Capacity
- Connection Diagram
- Terminal Functions
- Dimensions
- Fully-Enclosed Design
- Options
- Application Notes
- Global Service Network

Standard Specifications / Selecting the Capacity

Standard Specifications

R1000 Energy-saving Unit



Voltage		200 V Class											400 V Class																
Model CIMR-RA##A.....		03P5	0005	0007	0010	0014	0017	0020	0028	0035	0053	0073	0105	03P5	0005	0007	0010	0014	0017	0020	0028	0035	0043	0053	0073	0105	0150	0210	0300
Max. Applicable Motor Capacity kW		3.7	5.5	7.5	11	15	18.5	22	30	37	55	75	110	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	110	160	220	315
Rating	Regeneration Capacity kW	3.5	5	7	10	14	17	20	28	35	53	73	105	3.5	5	7	10	14	17	20	28	35	43	53	73	105	150	210	300
	Rated Output Current (DC) A	14	20	27	41	55	68	81	112	138	207	282	413	7	11	15	22	30	36	43	58	73	89	109	149	217	320	440	629
	Rated Input Current (AC) A	10	15	20	30	41	50	60	83	102	153	209	306	5	8	11	16	22	27	32	43	54	66	81	110	161	237	326	466
Input	Rated Voltage/Rated Frequency	200 to 240Vac 50/60Hz											380 to 480Vac 50/60Hz																
	Allowable Voltage Fluctuation	- 15 to + 10%																											
	Allowable Frequency Fluctuation	±2%																											
Control Characteristics	Control Method	120° excitation method																											
	Input Power Factor	0.9 min. (for rated load)																											
	Overload Protection	30 s at approx. 150% of rated current.																											
	Regenerative Torque	150% 30 s, 100% 25% ED 60 s, 80% continuous																											
Protection Functions	Main Control Functions	Cooling Fan on/off Switch, MEMOBUS/Modbus Comm. (RS-422/RS-485 max, 115.2 kbps)																											
	Momentary Overcurrent Protection	Operation stops for approx. 250% or higher of the rated power supply current.																											
	Fuse burnout	Operation stops if the fuse burns out.																											
	Overloads	Operation stops for 150% of the rated power supply current for 30 s.																											
	Overvoltage Protection	Output	Stops when DC bus voltage exceeds approx. 410 Vdc											Stops when DC bus voltage exceeds approx. 820 Vdc															
		Input	Stops when input voltage exceeds approx. 227 Vac											Stops when input voltage exceeds approx. 554 Vac															
	Undervoltage Protection	Output	Stops when DC bus voltage falls below approx. 190 Vdc											Stops when DC bus voltage falls below approx. 380 Vdc															
		Input	Stops when input voltage falls below approx. 150 Vac											Stops when input voltage falls below approx. 300 Vac															
	Momentary Power Loss	Immediately stops after Momentary Power Loss is detected.																											
	Power Supply Frequency Fault	Operation stops for a deviation of ± 6 Hz or more from the rated input frequency.																											
	Heatsink Overheat Protection	Protection by thermistor																											
	Ground Fault Protection *2	Protection by electronic circuit																											
	Charge LED	Charge LED remains lit until DC bus has fallen below approx. 50 V																											
	Environment	Area of Use	Indoors																										
		Ambient Temperature	-10 to +40°C (Enclosed Wall-Mounted (NEMA Type1)), -10 to +50°C (Open Type enclosure (IP00))																										
Humidity		95% RH or less (no condensation)																											
Shock		(2A03P5 to 2A0053, 4A03P5 to 4A0073) 10 to 20 Hz : 9.8 m/s ² , 20 to 55 Hz : 5.9 m/s ² (2A0073 to 2A0105, 4A0105 to 4A0300) 10 to 20 Hz : 9.8 m/s ² , 20 to 55 Hz : 2.0 m/s ²																											
Storage Temperature		-20 to +60°C (short-term temperature during transportation)																											
Altitude	Up to 1000 meters (derating required at altitudes from 1000 to 3000 m)																												
Protection Design	Open Type enclosure (IP00) Enclosed Wall-Mounted (NEMA Type1 (IP20)) *4																												
Safety Standard *3	UL508C, IEC/EN61800-5-1, IEC/EN61800-3																												

*1 : This number indicates the voltage class (2: 200 V class, 4: 400 V class).

*2 : Protection may not be provided under the following conditions as the motor windings are grounded internally during run:

- Low resistance to ground from the drive cable or terminal block.
- Drive already has a short-circuit when the power is turned on.

*3 : Application pending.

*4 : IP20 protection applies if the top cover is removed from a NEMA Type1 Unit (CIMR-RA2A03P5 to CIMR-RA2A0028 or CIMR-RA4A03P5 to CIMR-RA4A0028).

Note: The CIMR-RA2A0105 and CIMR-RA4A0210 to CIMR-RA4A0300 are in preparation.



R1000 Standard Configuration Devices

Voltage		200 V Class											400 V Class																
Model CIMR-RA##A.....		03P5	0005	0007	0010	0014	0017	0020	0028	0035	0053	0073	0105	03P5	0005	0007	0010	0014	0017	0020	0028	0035	0043	0053	0073	0105	0150	0210	0300
Power Coordinating Reactor	Rated Current A	20	30	40	60	80	90	120	160	200	280	360	500	10	15	20	30	40	50	60	80	90	120	150	200	250	330	490	660
	Inductance mH	0.53	0.35	0.265	0.18	0.13	0.12	0.09	0.07	0.05	0.038	0.026	0.02	2.2	1.42	1.06	0.7	0.53	0.42	0.36	0.26	0.24	0.18	0.15	0.11	0.09	0.06	0.04	0.03
Current Suppression Reactor	Rated Current A	15	15	20	40	40	50	60	80	100	153	209	306	7.5	7.5	10	15	25	25	30	40	50	60	75	100	161	237	326	466
	Inductance mH	0.31	0.31	0.15	0.1	0.1	0.06	0.05	0.04	0.03	0.02	0.015	0.01	1.2	1.2	0.6	0.4	0.3	0.3	0.2	0.15	0.12	0.1	0.08	0.06	0.04	0.03	0.02	0.013
Fuse	Rated Current A	20	25	32	50	63	80	100	125	160	200	350	500	16	16	16	25	40	40	50	63	80	100	125	160	250	350	500	630

* : This number indicates the voltage class (2: 200 V class, 4: 400 V class).

Note: The CIMR-RA2A0105 and CIMR-RA4A0210 to CIMR-RA4A0300 are in preparation.

● R1000 Capacity Selection



The recommended R1000 models are given in the following table.

200 V Class

Motor Capacity (kW)	3.7 or less	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110
Drive Capacity (kW)														
R1000 Mode CIMR-RA2A □□□□	03P5	●	—	—	—	—	—	—	—	—	—	—	—	—
	0005	—	●	—	—	—	—	—	—	—	—	—	—	—
	0007	—	—	●	—	—	—	—	—	—	—	—	—	—
	0010	—	—	—	●	—	—	—	—	—	—	—	—	—
	0014	—	—	—	—	●	—	—	—	—	—	—	—	—
	0017	—	—	—	—	—	●	—	—	—	—	—	—	—
	0020	—	—	—	—	—	—	●	—	—	—	—	—	—
	0028	—	—	—	—	—	—	—	●	—	—	—	—	—
	0035	—	—	—	—	—	—	—	—	●	—	—	—	—
	0053	—	—	—	—	—	—	—	—	—	●	●	—	—
	0073	—	—	—	—	—	—	—	—	—	—	—	●	—
	0105*	—	—	—	—	—	—	—	—	—	—	—	—	●

400 V Class


Motor Capacity (kW)	3.7 or less	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	185	220	315
Drive Capacity (kW)																			
R1000 Mode CIMR-RA4A □□□□	03P5	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	0005	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	0007	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	0010	—	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	0014	—	—	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—
	0017	—	—	—	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—
	0020	—	—	—	—	—	—	●	—	—	—	—	—	—	—	—	—	—	—
	0028	—	—	—	—	—	—	—	●	—	—	—	—	—	—	—	—	—	—
	0035	—	—	—	—	—	—	—	—	●	—	—	—	—	—	—	—	—	—
	0043	—	—	—	—	—	—	—	—	—	●	—	—	—	—	—	—	—	—
	0053	—	—	—	—	—	—	—	—	—	—	●	—	—	—	—	—	—	—
	0073	—	—	—	—	—	—	—	—	—	—	—	●	—	—	—	—	—	—
	0105	—	—	—	—	—	—	—	—	—	—	—	—	●	●	—	—	—	—
	0150	—	—	—	—	—	—	—	—	—	—	—	—	—	●	●	—	—	—
	0210*	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	●	●	—
	0300*	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	●

* : Available soon.



Depending on the amount of regenerated energy, you can select an R1000 with a smaller capacity than the drive. Use the DriveSelect Inverter Capacity Selection Program to make the selection. You can download the application for free from Yaskawa's product and technical information website (<http://www.e-mechatronics.com/en/>).

Model Number Key

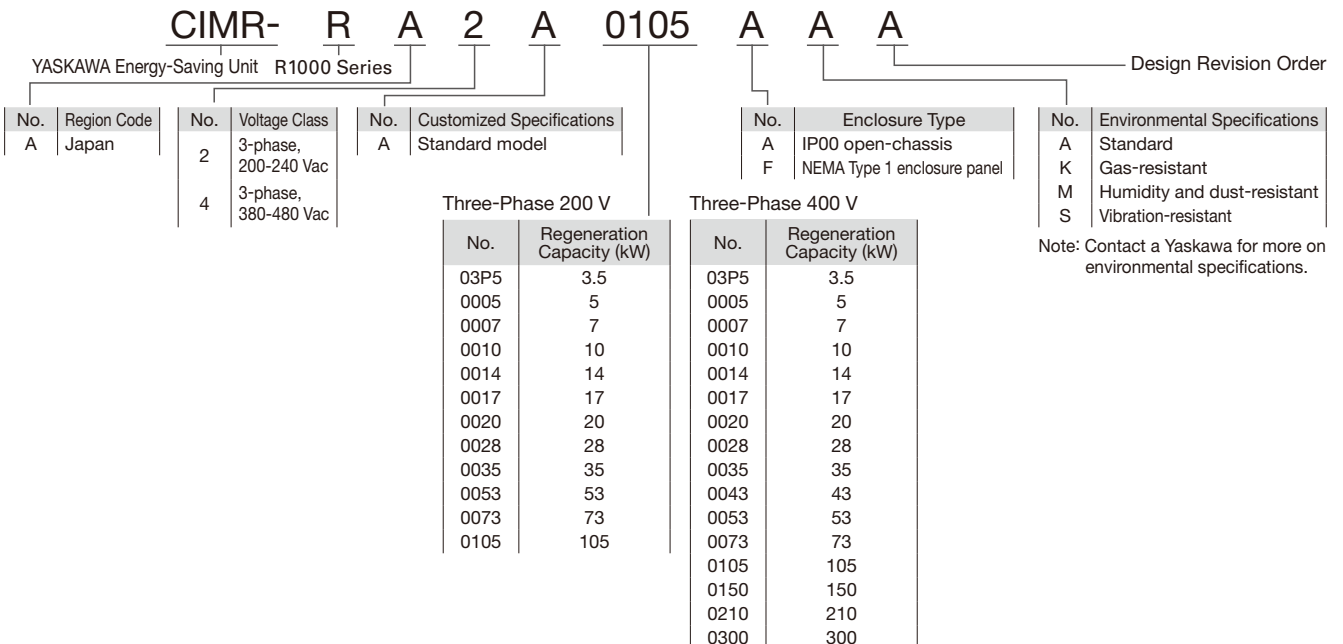


- Features
- Application Examples
- Applicable Models
- Standard Specifications
- Selecting the Capacity
- Connection Diagram
- Terminal Functions
- Dimensions
- Fully-Enclosed Design
- Options
- Application Notes
- Global Service Network

Connection Diagram / Terminal Functions

Standard Connection Diagram


Model: CIMR-RA2A03P5 to 0105, CIMR-RA4A03P5 to 0300

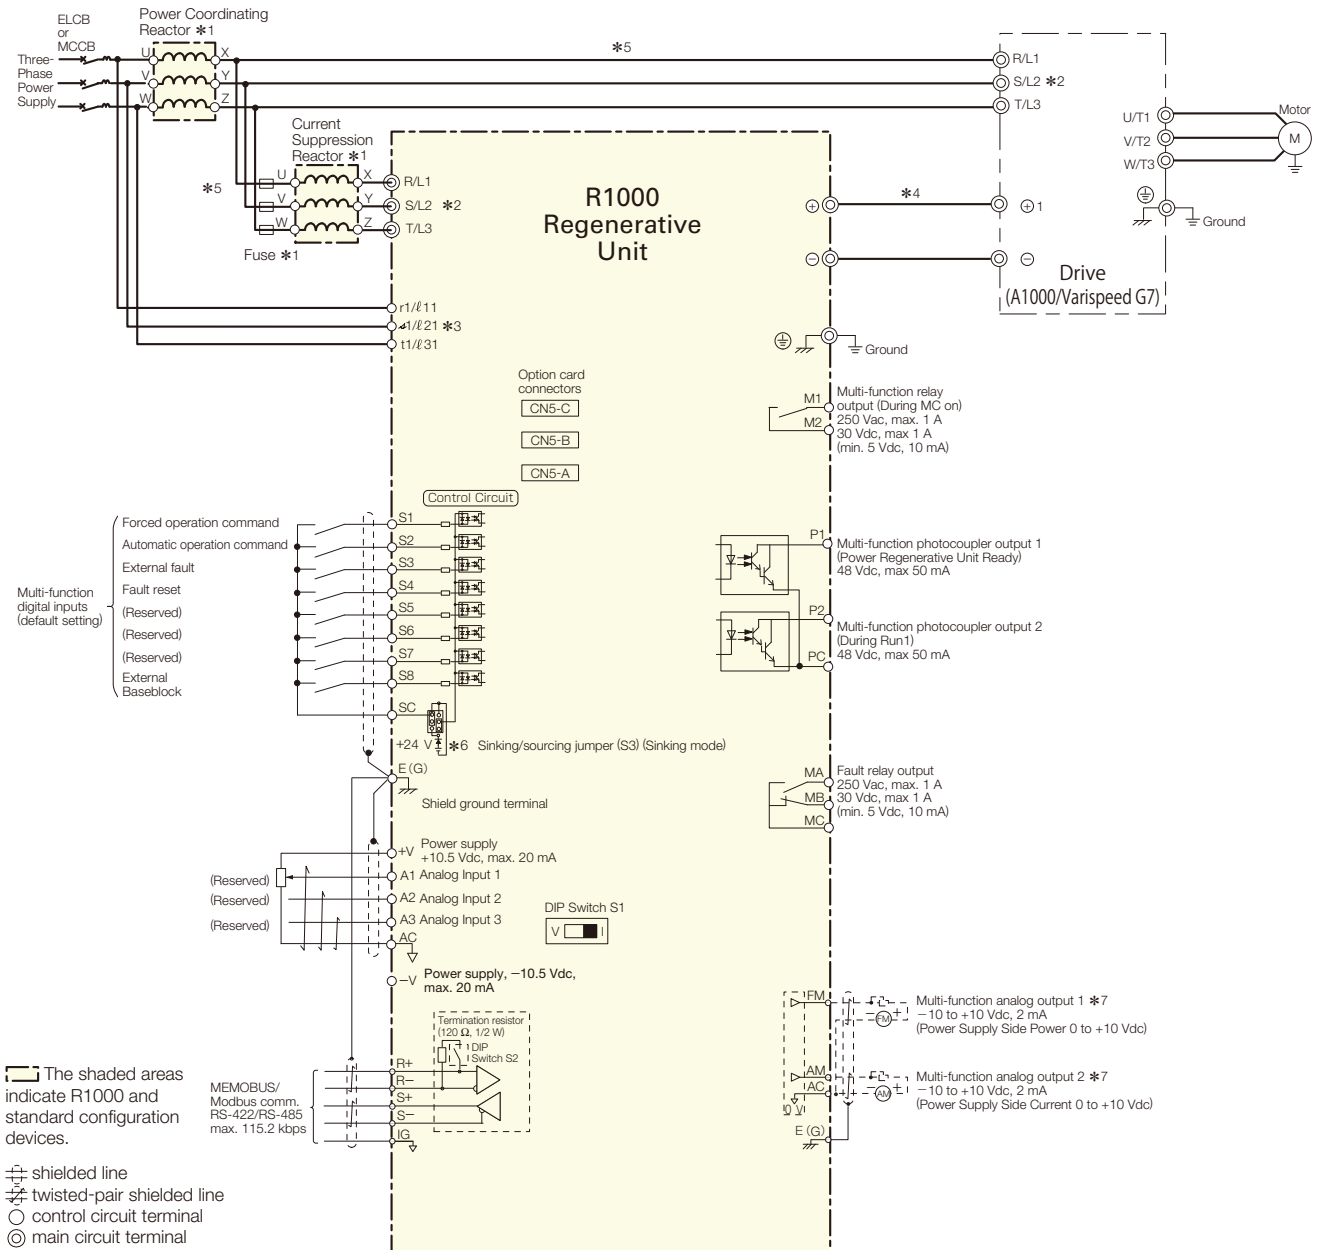

- *1 : Always use the specified AC reactor and fuses to avoid abnormal operations.
 - *2 : Always wire the drive's AC power supply terminals (R/L1, S/L2, and T/L3) from the secondary side of the power coordinating reactor.
 - *3 : Always wire the R1000's power supply voltage/phase detection circuits (r1/ℓ11, 41/ℓ21, and t1/ℓ31) from the primary side of the power coordinating reactor.
 - *4 : The DC current bus bar wiring between R1000 and the drive (between terminals ⊕ 1 and ⊖, terminals ⊖ and ⊕) must be within 5 m.
 - *5 : The wiring between the power coordinating reactor and drive and between the power coordinating reactor and R1000 must be within 10 m.
 - *6 : This figure shows an example of a sequence input to S1 through S8 using a non-powered relay or an NPN transistor (0 V common/sink mode: default). Set either sinking or sourcing with the sinking/sourcing jumpers (S3).
 - *7 : Monitor outputs work with devices such as wattmeters. Do not use these outputs in a feedback loop.
- Note: The CIMR-RA2A0105 and CIMR-RA4A0210 to CIMR-RA4A0300 are in preparation.

Terminal Functions

R1000 Energy-saving Unit

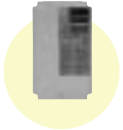


Main Circuit Terminals

Terminal	Type	Function
R/L1,S/L2,T/L3	Main circuit power supply inputs	These are the power supply input terminals that connect to the input reactor.
r1/ℓ11, r1/ℓ21,t1/ℓ31	Power supply voltage detection inputs	These terminals are to detect the power supply voltage order and voltage levels.
⊖	DC voltage inputs	These terminals are used to input a DC voltage.
⊕		
⊕	Grounding terminal	For 200 V class: 100 Ω or less For 400 V class: 10 Ω or less

Control Circuit Input Terminals (200 V/400 V Class)

Terminal Type	Terminal	Terminal Name (Default Setting)	Function (Signal Level)
Multi-Function Digital Inputs	S1	Multi-function selection input 1 (Forced operation command)	Photocoupler 24 Vdc, 8 mA The factory setting is for Sinking Mode. Use the sinking/sourcing mode jumper (S3) to change the sinking/sourcing mode setting to select an internal or external power supply.
	S2	Multi-function selection input 2 (Automatic operation command)	
	S3	Multi-function selection input 3 (External fault)	
	S4	Multi-function selection input 4 (Fault reset)	
	S5	Multi-function selection input 5 (Reserved)	
	S6	Multi-function selection input 6 (Reserved)	
	S7	Multi-function selection input 7 (Reserved)	
	S8	Multi-function selection input 8 (External Baseblock)	
	SC	Multi-function selection input common	
Analog Inputs	A1	—	—
	A2	—	—
	A3	—	—
	AC	—	—
	E (G)	Ground for shielded lines and option cards	—
Fault Relay Output	MA	N.O. output (Fault)	Relay output 30 Vdc, 10 mA to 1 A 250 Vac, 10 mA to 1 A MB N.C. output Minimum load: 5 Vdc, 10 mA
	MB	N.C. output (Fault)	
	MC	Fault output common	
Multi-Function Digital Output*1	M1	Multi-function digital output(During MC on)	Default setting:During MC on The M1-M2 terminals close during operation.
	M2		
Multi-Function Photocoupler Output	P1	Photocoupler output 1 (Power Regenerative Unit Ready)	Photocoupler output*2 48 V, 2 to 50 mA
	P2	Photocoupler output 2 (During run 1)	
	PC	Photocoupler output common	
Monitor Output	FM	Analog monitor output1	— 10 to +10 Vdc, or 0 to +10 Vdc
	AM	Analog monitor output2	
	AC	Monitor common	

- *1 : Do not assign functions to terminals M1 and M2 that involve frequent switching, unless absolutely necessary, because doing so may shorten the relay performance life. The switching life is estimated at 200,000 times (1 A, resistive load).
- *2 : Connect a flywheel diode as shown when driving a reactive load such as a relay coil. The diode must be rated for use of a voltage higher than the circuit voltage.

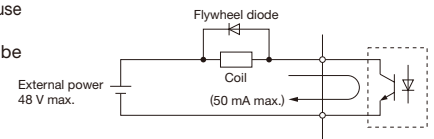

Serial Communication Terminals (200 V/400 V Class)

Type	No.	Signal Name	Function (Signal Level)
MEMOBUS/Modbus Communications*	R+	Communications input (+)	MEMOBUS/Modbus communications: Use an RS-422 or RS-485 cable to connect the unit. RS-422/RS-485 MEMOBUS/Modbus communications protocol 115.2 kbps (max.)
	R-	Communications input (-)	
	S+	Communications output (+)	
	S-	Communications output (-)	
	IG	Shield ground	

- * : Enable the termination resistor in the last unit in a MEMOBUS/Modbus network by setting DIP switch S2 to the ON position.


R1000 Standard Configuration Devices

Power Coordinating Reactor

Terminal	Type	Function
U	Power coordinating reactor inputs	These terminals are connected to the power supply.
V		
W		
X	Power coordinating reactor outputs	These terminals are connected to the connected drive device input terminals and input fuses.
Y		
Z		

Current Suppression Reactor

Terminal	Type	Function
U	Current suppression reactor inputs	These terminals are connected to the input fuses.
V		
W		
X	Current suppression reactor outputs	These terminals are connected to the R1000 Power Regenerative Unit.
Y		
Z		

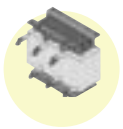

Dimensions

R1000 Energy-saving Unit

Enclosures

Voltage Class		200 V Class										400 V Class																	
Model CIMR-RA#A#		03P5	0005	0007	0010	0014	0017	0020	0028	0035	0053	0073	0105	03P5	0005	0007	0010	0014	0017	0020	0028	0035	0043	0053	0073	0105	0150	0210	0300
Max. Applicable Motor Capacity kW		3.7	5.5	7.5	11	15	18.5	22	30	37	55	75	110	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	110	160	220	315
Regeneration Capacity kW		3.5	5	7	10	14	17	20	28	35	53	73	105	3.5	5	7	10	14	17	20	28	35	43	53	73	105	150	210	300
Open-Chassis	IP00	Remove top cover of wall-mount enclosure for IP20 rating										IP00 standard			Remove top cover of wall-mount enclosure for IP20 rating						IP00 standard								
Enclosure Panel	NEMA Type1	Standard					Made to order *2					Standard						Made to order		*2									


*1 : This number indicates the voltage class (2: 200 V class, 4: 400 V class).

*2 : Not available

Note: The CIMR-RA2A0105 and CIMR-RA4A0210 to CIMR-RA4A0300 are in preparation.

Open-Chassis [IP00]

Dimensions (mm)

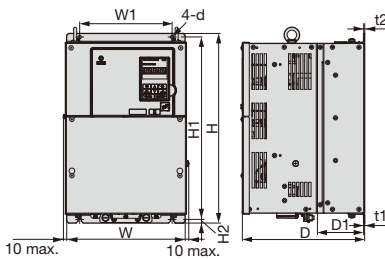

200 V Class

Model CIMR-RA2A#	Regeneration Capacity kW	Dimensions (mm)										Weight (kg)	Cooling
		W	H	D	W1	H1	H2	D1	t1	t2	d		
0035	35	275	450	258	220	435	7.5	100	2.3	2.3	M5	21	Fan cooled
0053	53	325	550	283	260	535	7.5	110	2.3	2.3	M6	33	
0073	73	450	705	330	325	680	12.5	130	3.2	3.2	M10	62	
0105*	105	500	800	350	370	773	13	130	4.5	4.5	M12	81	

400 V Class

Model CIMR-RA4A#	Regeneration Capacity kW	Dimensions (mm)										Weight (kg)	Cooling
		W	H	D	W1	H1	H2	D1	t1	t2	d		
0035	35	275	450	258	220	435	7.5	100	2.3	2.3	M6	20	Fan cooled
0043	43												
0053	53	325	550	283	260	535	7.5	110	2.3	2.3	M6	33	
0073	73												
0105	105	450	705	330	325	680	12.5	130	3.2	3.2	M10	62	
0150	150												
0210*	210	500	800	350	370	773	13	130	4.5	4.5	M12	85.6	
0300*	300											87	

* : Available soon

Dimensions (continued)

Combinations of Standard Configuration Devices

● Power Coordinating Reactor

200 V Class

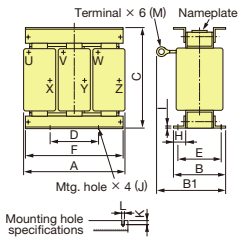


Figure 1

Model CIMR-RA2A::	Code No.	Qty.	Figure	Dimensions (mm)											Weight (kg)		
				A	B	B1	C	D	E	F	H	I	J	K		L	M
03P5	100-107-355	1	1	130	88	114	105	50	65	129	24	4.5	M6	11.5	7	M5	3.5
0005	100-107-356			130	88	119	105	50	70	129	23.5	4.5	M6	9	7	M5	4.5
0007	100-107-357			130	98	139	105	50	75	129	24	4.5	M6	11.5	7	M6	4.8
0010	100-107-358			160	105	147.5	130	75	85	159	25	4.5	M6	10	7	M6	7
0014	100-107-359			180	100	155	150	75	80	179	25	4.5	M6	10	7	M8	8
0017	100-107-360			180	100	150	150	75	80	179	25	4.5	M6	10	7	M8	8.5
0020	100-107-361			180	100	155	150	75	80	179	25	4.5	M6	10	7	M10	9
0028	100-107-362			210	100	170	175	75	80	209	25	4.5	M6	10	7	M10	12
0035	100-107-363			210	115	182.5	175	75	95	205	25	3	M6	10	7	M10	16
0053	100-107-364			190	105	150	240	70	90	189	21.5	3	M8	7.5	9	M10	18
0073	100-107-365			240	105	150	285	80	90	230	26.5	3	M8	7.5	9	M10	26
0105*	100-107-366			265	115	155	270	90	100	250	31.5	3	M8	7.5	9	M10	28

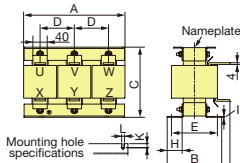


Figure 2

400 V Class

Model CIMR-RA4A::	Code No.	Qty.	Figure	Dimensions (mm)											Weight (kg)		
				A	B	B1	C	D	E	F	H	I	J	K		L	M
03P5	100-107-367	1	3	130	88	—	130	50	65	129	23	2	M6	11.5	7	M4	3.5
0005	100-107-368			130	98	—	130	50	75	129	23	2	M6	11.5	7	M4	4.5
0007	100-107-369			160	90	115	130	75	70	159	25	3	M6	10	7	M5	6.2
0010	100-107-370			160	105	132.5	130	75	85	159	25	3	M6	10	7	M5	7
0014	100-107-371			180	100	140	150	75	80	179	25	3	M6	10	7	M6	9
0017	100-107-372			180	100	145	150	75	80	179	25	3	M6	10	7	M6	9.5
0020	100-107-373			180	95	147.5	150	75	75	179	22.5	3	M6	10	7	M6	9.5
0028	100-107-374			210	100	150	175	75	80	204	25	3	M6	10	7	M8	13
0035	100-107-375			210	115	177.5	175	75	95	204	25	3	M6	10	7	M8	18
0043	100-107-376			240	126	193	205	150	110	239	25	3	M8	8	10	M10	23
0053	100-107-377			240	126	198	205	150	110	239	25	3	M8	8	10	M10	25
0073	100-107-378			270	162	231	230	150	130	259	40	3	M8	16	10	M10	34
0105	100-107-379			270	162	198	230	150	130	259	41	3	M8	16	10	M10	35
0150	100-107-380			285	168	209	250	160	140	275	43	4	M10	14	12	M10	45
0210*	100-107-381	320	158	209	305	180	130	315	40	4	M10	14	12	M12	55		
0300*	100-107-382	320	195	237.5	340	180	160	315	45.5	4	M12	17.5	15	M12	73		

* : Available soon

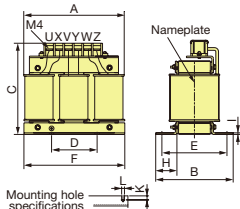


Figure 3

● Current Suppression Reactor

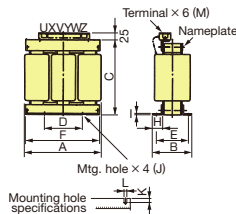


Figure 1

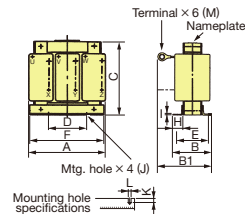


Figure 2

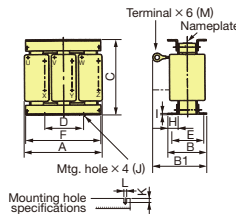


Figure 3

200 V Class

Model CIMR-RA2A::	Code No.	Qty.	Dimensions (mm)											Weight (kg)		
			A	B	B1	C	D	E	F	H	I	J	K		L	M
03P5	100-107-384	1	105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0005	100-107-384		105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0007	100-107-385		105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0010	100-107-386		120	71	120	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0014	100-107-386		120	71	120	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0017	100-107-387		120	71	120	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0020	100-107-388		120	71	125	90	40	50	105	20	2.3	M6	11	7	M6	2.5
0028	100-107-389		130	88	140	105	50	70	130	22	3.2	M6	9	7	M8	3
0035	100-107-396		130	88	145	105	50	70	130	22	3.2	M6	9	7	M8	3
0053	100-107-397		160	89	161	130	75	70	160	25	2.3	M6	9.5	7	M10	5.1
0073	100-107-398		160	99	171	130	75	80	160	25	2.3	M6	9.5	7	M12	9
0105*	100-107-399		180	99	183.5	155	75	85	180	25	2.3	M6	7	7	M12	9

400 V Class

Model CIMR-RA4A::	Code No.	Qty.	Dimensions (mm)											Weight (kg)		
			A	B	B1	C	D	E	F	H	I	J	K		L	M
03P5	100-107-390	1	105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0005	100-107-390		105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0007	100-107-391		105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0010	100-107-392		105	61	—	70	40	40	85	20	1.6	M5	10.5	5.8	M4	1.5
0014	100-107-393		120	71	110	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0017	100-107-393		120	71	110	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0020	100-107-394		120	71	115	90	40	50	105	20	2.3	M6	11	7	M5	2.5
0028	100-107-395		120	71	115	90	40	50	105	20	2.3	M6	11	7	M6	2.5
0035	100-107-400		130	88	135	105	50	70	130	22	3.2	M6	9	7	M6	3
0043	100-107-401		130	98	145	105	50	80	130	22	3.2	M6	9	7	M6	4
0053	100-107-402		160	90	145	125	75	70	160	25	2.3	M6	9.5	7	M8	5
0073	100-107-403		160	90	145	125	75	70	160	25	2.3	M6	9.5	7	M8	5
0105	100-107-404		180	99	181	155	75	85	180	25	2.3	M6	7	7	M10	9
0150	100-107-405		205	106	191.5	170	75	85	205	25	3.2	M6	10.5	7	M12	15.1
0210*	100-107-406	205	116	202.2	175	75	95	205	25	3.2	M6	10.5	7	M12	17	
0300*	100-107-407	240	126	253	215	150	110	240	25	3.2	M8	8	10	M12	25	

* : Available soon

Fuse/ Fuse Holder

Fuse

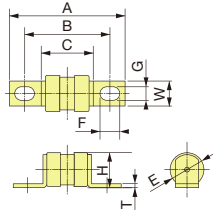


Figure1

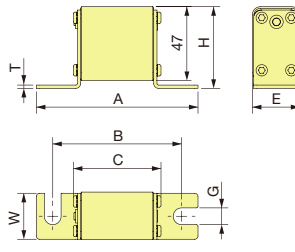


Figure2

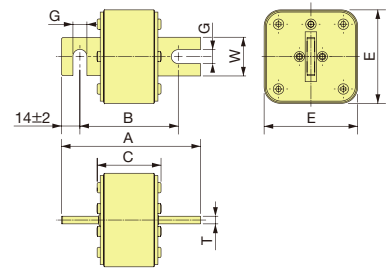


Figure3

Fuse Holder

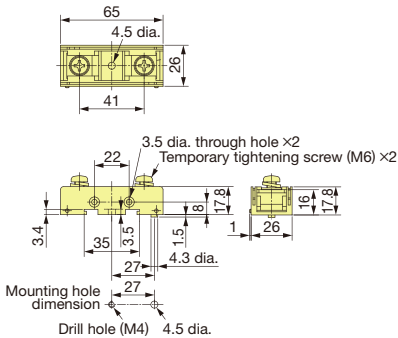


Figure4

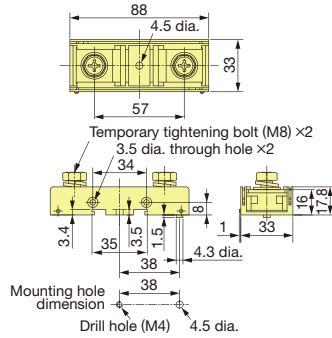


Figure5

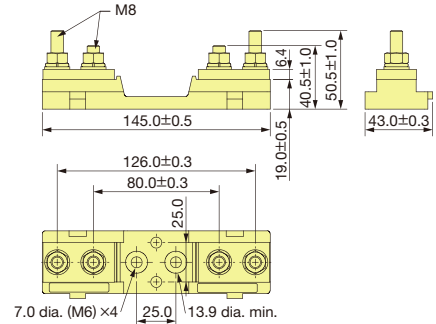


Figure6

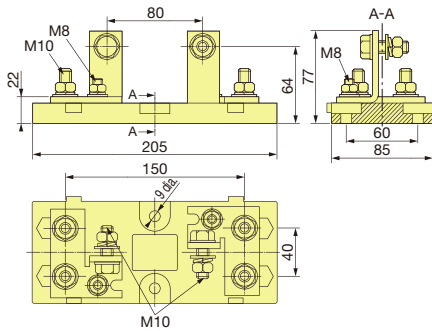


Figure7

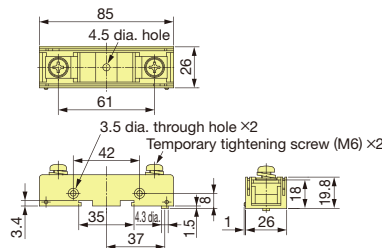


Figure8

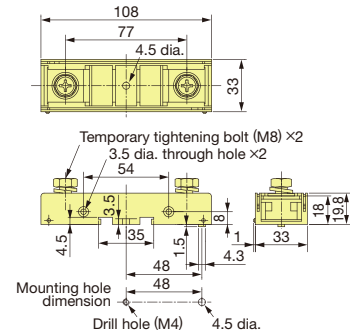


Figure9

200 V Class

Model CIMR-RA2A	Model	Code No.*1	Qty.	Figure	Fuse											Fuse Holder					
					Dimensions (mm)											Model	Code No.*1	Qty.	Figure		
					A	B	C	E	F	G	H	W	T								
03P5	350GH-20ULTC	100-107-420	3	1	55	41	25	18.5	9.5	6.5	18	12	2	HT4017	100-107-409	3	4				
0005	350GH-25ULTC	100-110-428			55	41	25	18.5	9.5	6.5	18	12	2								
0007	350GH-32ULTC	100-110-429			55	41	25	18.5	9.5	6.5	18	12	2								
0010	350GH-50ULTC	100-110-430			55	41	25	18.5	9.5	6.5	18	12	2								
0014	350GH-63ULTC	100-107-422			55	41	25	18.5	9.5	6.5	18	12	2								
0017	350GH-80ULTC	100-107-423			55	41	25	18.5	9.5	6.5	18	12	2								
0020	350GH-100ULTC	100-107-424			55	41	25	18.5	9.5	6.5	18	12	2								
0028	350GH-125ULTC	100-107-425			78	57	29	25	14	9	26	20	3					HT5723	100-107-410	3	5
0035	350GH-160ULTC	100-107-426			78	57	29	25	14	9	26	20	3								
0053	350GH-200ULTC	100-110-431			78	57	29	25	14	9	26	20	3								
0073	170M2620	100-110-432			2	98	78	52.5	30	—	10	49	28					2	170H1007	100-110-543	6
0105*2	170M3021	100-110-433			3	110	78	50	43	—	11	—	20					6	170H3003	100-107-417	7

400 V Class

Model CIMR-RA4A	Model	Code No.*1	Qty.	Figure	Fuse											Fuse Holder					
					Dimensions (mm)											Model	Code No.*1	Qty.	Figure		
					A	B	C	E	F	G	H	W	T								
03P5	660GH-16ULTC	100-107-427	3	1	76.5	61	46	17.5	9.5	6.5	19	12	2	HT6017	100-107-411	3	8				
0005	660GH-16ULTC	100-107-427			76.5	61	46	17.5	9.5	6.5	19	12	2								
0007	660GH-16ULTC	100-107-427			76.5	61	46	17.5	9.5	6.5	19	12	2								
0010	660GH-25ULTC	100-107-428			76.5	61	46	17.5	9.5	6.5	19	12	2								
0014	660GH-40ULTC	100-107-429			76.5	61	46	17.5	9.5	6.5	19	12	2								
0017	660GH-40ULTC	100-107-429			76.5	61	46	17.5	9.5	6.5	19	12	2								
0020	660GH-50ULTC	100-107-430			76.5	61	46	17.5	9.5	6.5	19	12	2								
0028	660GH-63ULTC	100-107-431			76.5	61	46	17.5	9.5	6.5	19	12	2								
0035	660GH-80ULTC	100-110-434			76.5	61	46	17.5	9.5	6.5	19	12	2								
0043	660GH-100ULTC	100-107-432			76.5	61	46	17.5	9.5	6.5	19	12	2								
0053	660GH-125ULTC	100-107-436			98	77.8	50	23.5	14	9	26	20	3					HT7723	100-107-415	3	9
0073	660GH-160ULTC	100-107-437			98	77.8	50	23.5	14	9	26	20	3								
0105	170M1371	100-110-435			100	78	54	21	—	8	40	20	2								
0150	170M2620	100-110-432			2	98	78	52.5	30	—	10	49	28					2	170H1007	100-110-543	6
0210*2	170M3021	100-110-433			3	110	78	50	43	—	11	—	20					6	170H3003	100-107-417	3
0300*2	170M4016	100-107-441	109	78	51	74	—	11	—	30	6										

*1 : Three fuses are included with one code No.
*2 : Available soon


● Attachment for External Heatsink

Additional attachments are required for R1000 with model numbers CIMR-RA2A03P5 to 0028, CIMR-RA4A03P5 to 0028.

The final product will be wider and taller than the unit.

Additional attachments are not required for CIMR-RA2A0035 and above, and CIMR-RA4A0035 and above.

Note: Contact Yaskawa for information on attachments for earlier models.

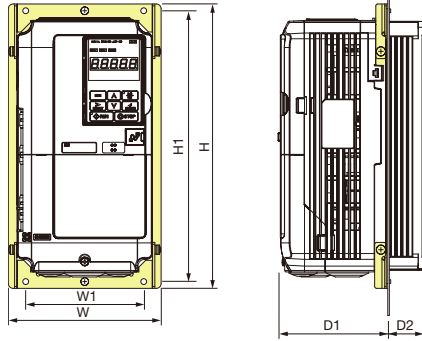


200 V Class

Model CIMR-RA2A: []	Dimensions (mm)						Code No.
	W	H	W1	H1	D1	D2	
03P5	158	294	122	280	112	53.4	EZZ020800B
0005							
0007							
0010	198	329	160	315	112	73.4	EZZ020800C
0014							
0017							
0020	238	380	192	362	119	76.4	EZZ020800D
0028							

400 V Class

Model CIMR-RA4A: []	Dimensions (mm)						Code No.
	W	H	W1	H1	D1	D2	
03P5	158	294	122	280	112	53.4	EZZ020800B
0005							
0007							
0010	198	329	160	315	112	73.4	EZZ020800C
0014							
0017							
0020	238	380	192	362	119	76.4	EZZ020800D
0028							

● Panel Modification for External Heatsink

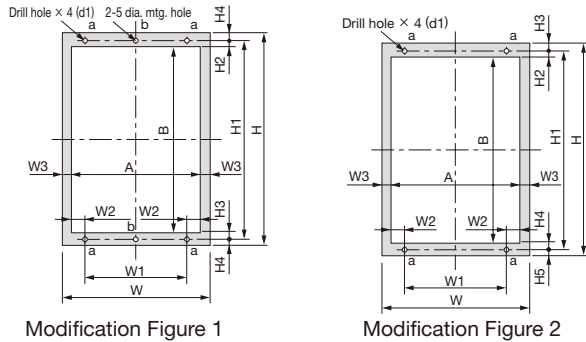

Modification Figure 1

Modification Figure 2

200 V Class

Model CIMR-DA2A: []	Modification Figure	Dimensions (mm)												
		W	H	W1	W2	W3	H1	H2	H3	H4	H5	A	B	d1
03P5	1	158	294	122	9	9	280	8.5	8.5	7	—	140	263	M5
0005														
0007														
0010														
0014														
0017														
0020	2	238	380	192	14	9	362	13	8	9	—	220	341	M6
0028														
0035														
0053														
0073														
0105*	500	800	370	57	8	773	16	14	17	13	484	740	M12	

400 V Class

Model CIMR-DA4A: []	Modification Figure	Dimensions (mm)												
		W	H	W1	W2	W3	H1	H2	H3	H4	H5	A	B	d1
03P5	1	158	294	122	9	9	280	8.5	8.5	7	—	140	263	M5
0005														
0007														
0010														
0014														
0017														
0020	2	238	380	192	14	9	362	13	8	9	—	220	341	M6
0028														
0035														
0043														
0053														
0073	2	450	705	325	54.5	8	680	12.5	12.5	12.5	12.5	434	655	M10
0105														
0150														
0210*														
0300*	500	800	370	57	8	773	16	14	17	13	484	740	M12	

* : Available soon

Features

Application Examples

Applicable Models

Standard Specifications

Selecting the Capacity

Connection Diagram

Terminal Functions

Dimensions

Fully-Enclosed Design

Options

Application Notes

Global Service Network

Options

Options

Name	Purpose	Model, Manufacturer	Page
24 V Power Supply	Provides power supply for the control circuit and option boards. Note: Parameter settings cannot be changed when the drive is operating solely from this power supply.	PS-A10LB (200 V class) PS-A10HB (400 V class)	19
USB Copy Unit (RJ-45/USB compatible plug)	· Can copy parameter settings easily and quickly to be later transferred to another drive. · Adapter for connecting R1000 to the USB port of a PC.	JVOP-181	21
PC Cable	Connect R1000 and PC when using DriveWizard Plus. The cable length must be 3 m or less.	Commercially available USB2.0 A/B cable.	21
LCD Operator	For easier operation when using the optional LCD operator. Allows for remote operation. Includes a Copy function for saving the settings of R1000.	JVOP-180	20
LCD Operator Extension Cable	Cable for connecting the LCD operator.	WV001 : 1 m WV003 : 3 m	20
Attachment for External Heatsink	Required for heatsink installation. Note: Current derating may be needed when using a heatsink.	—	17

Option Cards


Type	Name	Model	Function	Manual No.	
Built-in Type (connected to connector)	Communications Option Card	MECHATROLINK-II Interface	SI-T3	Used for running or stopping the R1000, setting or referencing parameters, and monitoring input current, output voltage, or similar items through MECHATROLINK-II communication with the host controller.	TOBPC73060050 SIEPC73060061
		CC-Link Interface	Available soon	Used for running or stopping the R1000, setting or referencing parameters, and monitoring input current, input voltage, or similar items through CC-Link communication with the host controller.	—
Built-in Type (connected to connector)	Monitor Option Card	Analog Monitor	AO-A3	Outputs analog signal for monitoring the output state (input current, input voltage etc.) of the R1000. · Output resolution: 11 bit signed (1/2048) · Output voltage: 0 to 10 Vdc (non-isolated) · Terminals: 2 analog outputs	TOBPC73060040
		Digital Output	DO-A3	Outputs isolated type digital signal for monitoring the run state of the R1000 (alarm signal, during run, etc.) · Terminals: 6 photocoupler outputs (48 V, 50 mA or less) 2 relay contact outputs (250 Vac, 1 A or less 30 Vdc, 1 A or less)	TOBPC73060041

Note: 1. Each communication option card requires a separate configuration file to link to the network.
2. The option cards are RoHS compliant.

● 24 V Power Supply

The 24 V Power Supply Option maintains R1000 control circuit power in the event of a main power outage. The control circuit keeps the network communications and I/O data operational in the event of a power outage. It supplies external power to the control circuit only.


Note: Even if a back-up power supply is used for the control circuit, the main circuit must still have power in order to change parameter settings.

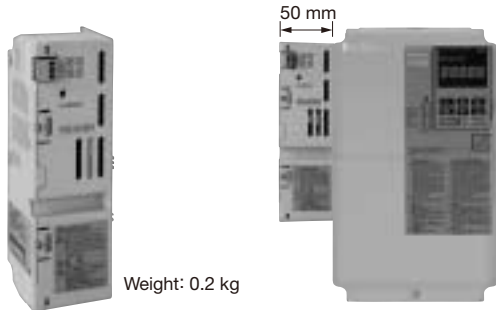

Weight: 0.2 kg

The installed option adds 50 mm to the total width of R1000.

Connection Diagram

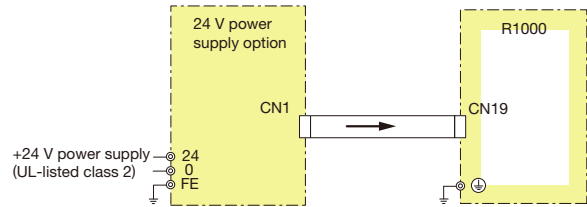


Model	Code No.
200 V Class: PS-A10LB	PS-A10LB
400 V Class: PS-A10HB	PS-A10HB

LCD Operator

An LCD operator with a 6-digit display makes it easy to check the necessary information. Includes a copy function for saving drive settings.

Model	Code No.
JVOP-180	100-041-022

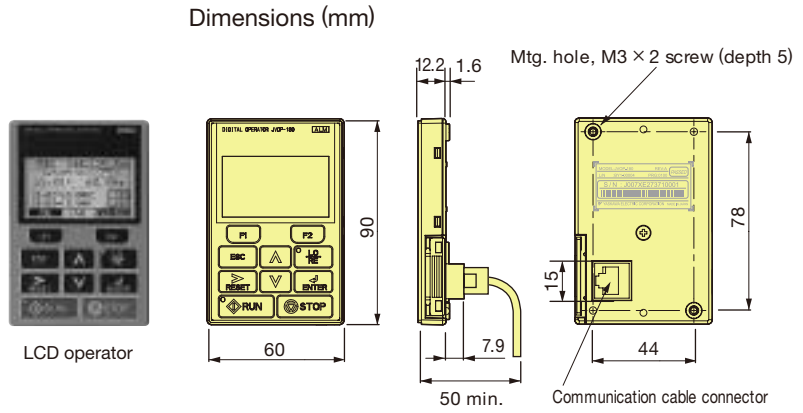


Operator Extension Cable

Enables remote operation.





Model	Code No.
WV001 (1 m)	WV001
WV003 (3 m)	WV003

Note: Do not use this cable for connecting the unit to a PC. Failure to comply may cause damage to the PC.

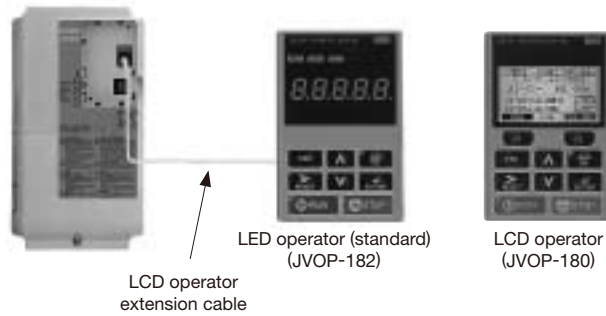

Operator Mounting Bracket


This bracket is required to mount the LED or LCD operator outside an enclosure panel.

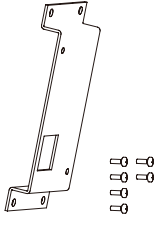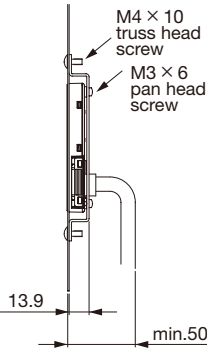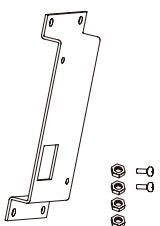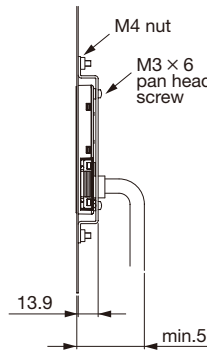Item	Model	Code No.	Installation	Notes
 <p>Installation Support Set A</p>	EZZ020642A	100-039-992		For use with holes through the panel
 <p>Installation Support Set B</p>	EZZ020642B	100-039-993		For use with panel mounted threaded studs Note: If weld studs are on the back of the panel, use the Installation Support Set B.

● USB Copy Unit (Model: JVOP-181)

Copy parameter settings in a single step, and then transfer those settings to another R1000.
Connects to the RJ-45 port on the R1000 and to the USB port on a PC.

Connection

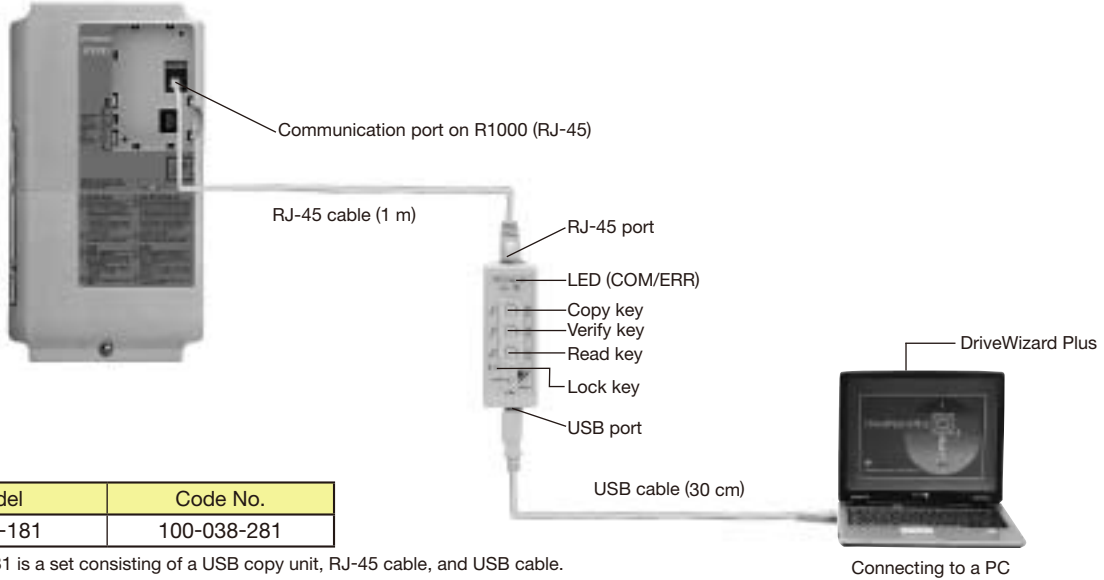

Model	Code No.
JVOP-181	100-038-281

Note: JVOP-181 is a set consisting of a USB copy unit, RJ-45 cable, and USB cable.

Specifications

Item	Specifications
Port	LAN (RJ-45) Connect to the R1000. USB (Ver.2.0 compatible) Connect to the PC as required.
Power Supply	Supplied from a PC or the R1000.
Operating System	Windows2000/XP
Memory	Memorizes the parameters for one R1000.
Dimensions	30 (W) × 80 (H) × 20 (D) mm
Accessories	RJ-45 Cable (1 m), USB Cable (30 cm)

Note: 1. You can also use a commercially available USB 2.0 cable (with A-B connectors) for the USB cable.
2. No USB cable is needed to copy parameters to other units.

Note: 1. Parameters can only be saved to the R1000 when the voltage class, capacity, control mode, and software version match.


2. Requires a driver for the USB copy unit JVOP-181. You can download the driver for free from Yaskawa's product and technical information website (<http://www.e-mechatronics.com>).

3. Parameter copy function disabled when connected to a PC.

● PC Cable

Cable used to connect R1000 to a PC with DriveWizard Plus or DriveWorksEZ installed.
Use a commercially available USB 2.0 cable (A-B connectors, 3 m max.).

Connection

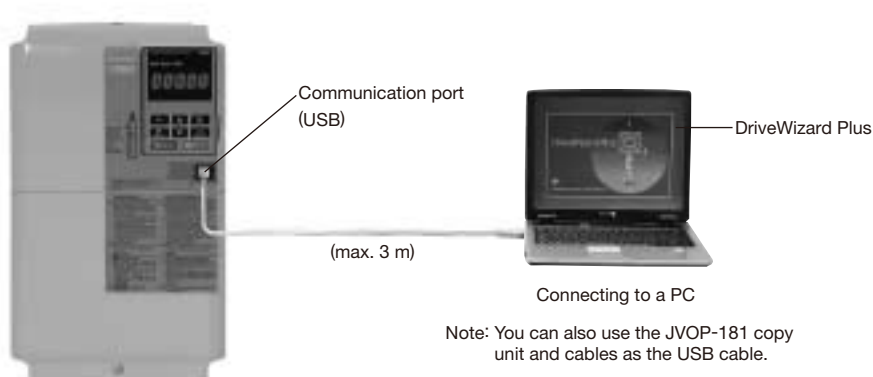

Note: 1. DriveWizard Plus is a PC software package for managing parameters and functions in Yaskawa drives and energy-saving units. You can download the driver for free from Yaskawa's product and technical information website (<http://www.e-mechatronics.com/en/>).

2. Requires USB driver. You can download the driver for free from Yaskawa's product and technical information website (<http://www.e-mechatronics.com/en/>).

● Application Precautions

■ **Installation of R1000 Standard Configuration Devices**
You must install both R1000 and the R1000 standard configuration devices.

■ **Replacing Previous Models**
If the peripheral devices for previous models (i.e., the VS-656RC5) are used with the R1000, power coordinating reactors and current suppression reactors can be used. However, use the R1000 exclusive model for fuses and fuse holders.
Refer to installation instructions for details.

■ Use one R1000 for each drive. Never connect more than one drive to one R1000.

■ Use an R1000 that has the same or a higher capacity (load (HD) rating) than the drive.

■ Do not connect the R1000 in parallel with any other power regenerative unit.

■ **Panel Installation**
Install R1000 in a clean environment by either selecting an area free of airborne oil mist, corrosive gas, flammable gas, dust, and lint, or install R1000 in a fully-enclosed panel. If you install R1000 in a panel, determine cooling methods and panel dimensions so that the ambient temperature of R1000 is within the allowable temperature range. Do not install R1000 on wood or other inflammable materials.

■ **Installation Direction**
Install R1000 upright on a wall.

■ **Wiring Check**
Do not short the output terminals or apply voltage to output terminals (U/T1, V/T2, W/T3), because this can cause serious damage to R1000.
Be sure to perform a careful check of all sequence wiring and other connections before turning the power on. Make sure there are no short circuits on the control terminals (+V, AC, etc.), because this could damage R1000.

■ **Inspection and Maintenance**
Capacitors in R1000 do not immediately discharge after shutting off the power. After shutting off the power, wait at least the amount of time specified on the unit before touching any components.
Failure to comply may result in injury to personnel from electrical shock. Take proper precautions to prevent burns, because the heatsink of R1000 can get very hot during operation. When replacing the cooling fan, shut off the power to R1000 and wait at least 15 minutes to ensure that the heatsink has cooled down.

■ **Wiring**
Yaskawa recommends using ring terminals on all models. Use only the tools recommended by the terminal manufacturer for crimping.

■ **Transporting and Installation**
· Do not steam clean R1000.
During transport, keep the unit from coming into contact with salts, fluorine, bromine, phthalate esters, and other such harmful chemicals.
· Carry any standard configuration device or peripheral device in a method suitable for the weight of the device. If the devices are handled incorrectly, they may fall and result in injury or device damage.

■ The R1000 cannot be used with a single-phase power supply. Always use a three-phase power supply.

● Peripheral Devices

■ **Installation of Noise Filters**
If you install an input noise filter on the drive, always install it on the primary side of the power coordinating reactor.

■ **Wire Gauges and Wiring Distance**
R1000 phase control can be unstable as a result of voltage loss across a long cable running between the power coordinating reactor and the power supply. Make sure that appropriate wire gauge is used.
The optional LCD operator requires a dedicated cable to connect to R1000. If an analog signal is sent via the input terminals to operate R1000, make sure that the cable between the analog operator and the drive is not longer than 50 m, and that the cable is separated from the main circuit wiring. Use reinforced main circuit and reinforced relay sequence circuitry to prevent inductance from surrounding devices.



Global Service Network



Region	Service Area	Service Location	Service Agency	Telephone/Fax
North America	U.S.A.	Chicago (HQ) Los Angeles San Francisco New Jersey Boston Ohio North Carolina	① YASKAWA AMERICA INC.	Headquarters ☎ +1-847-887-7000 FAX +1-847-887-7310
	Mexico	Mexico City	② PILLAR MEXICANA. S.A. DE C.V.	☎ +52-555-660-5553 FAX +52-555-651-5573
South America	South America	São Paulo	③ YASKAWA ELÉTRICO DO BRASIL LTDA.	☎ +55-11-3585-1100 FAX +55-11-5581-8795
	Colombia	Bogota	④ VARIADORES LTD.A.	☎ +57-1-428-4225 FAX +57-1-428-2173
Europe	Europe, South Africa	Frankfurt	⑤ YASKAWA EUROPE GmbH	☎ +49-6196-569-300 FAX +49-6196-569-398
Asia	Japan	Tokyo, offices nationwide	⑥ YASKAWA ELECTRIC CORPORATION (Manufacturing, sales)	☎ +81-3-5402-4502 FAX +81-3-5402-4580
			⑦ YASKAWA ELECTRIC ENGINEERING CORPORATION (After-sales service)	☎ +81-4-2931-1810 FAX +81-4-2931-1811
	South Korea	Seoul	⑧ YASKAWA ELECTRIC KOREA CORPORATION	☎ +82-2-784-7844 FAX +82-2-784-8495
			⑨ YASKAWA ENGINEERING KOREA CORPORATION	☎ +82-2-3775-0337 FAX +82-2-3775-0338
	China	Beijing, Guangzhou, Shanghai	⑩ YASKAWA ELECTRIC (CHINA) CO., LTD.	☎ +86-21-5385-2200 FAX +86-21-5385-3299
	Taiwan	Taipei	⑪ YASKAWA ELECTRIC TAIWAN CORPORATION	☎ +886-2-2502-5003 FAX +886-2-2505-1280
	Singapore	Singapore	⑫ YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.	☎ +65-6282-3003 FAX +65-6289-3003
			⑬ YASKAWA ENGINEERING ASIA-PACIFIC PTE. LTD.	☎ +65-6282-1601 FAX +65-6382-3668
	Thailand	Bangkok	⑭ YASKAWA ELECTRIC (THAILAND) CO., LTD.	☎ +66-2693-2200 FAX +66-2693-4200
	India	Mumbai	⑮ LARSEN & TOUBRO LIMITED	Headquarters ☎ +91-22-67226200 +91-22-27782230 FAX +91-22-27783032
Oceania	Australia	Sydney (HQ) Melbourne	⑯ ROBOTIC AUTOMATION PTY. LTD.	Headquarters ☎ +61-2-9748-3788 FAX +61-2-9748-3817

Features

Application Examples

Applicable Models

Standard Specifications

Selecting the Capacity

Connection Diagram

Terminal Functions

Dimensions

Fully-Enclosed Design

Options

Application Notes

Global Service Network

R1000

DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyaichi, Yukuhashi, Fukuoka, 824-8511, Japan
Phone 81-930-25-3844 Fax 81-930-25-4369
<http://www.yaskawa.co.jp>

YASKAWA ELECTRIC CORPORATION

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-6891, Japan
Phone 81-3-5402-4502 Fax 81-3-5402-4580
<http://www.yaskawa.co.jp>

YASKAWA AMERICA, INC.

2121 Norman Drive South, Waukegan, IL 60085, U.S.A.
Phone 1-800-YASKAWA (927-5292) or 1-847-887-7000 Fax 1-847-887-7310
<http://www.yaskawa.com>

YASKAWA ELÉTRICO DO BRASIL LTDA.

Avenida Piraporinha 777, Diadema, São Paulo, 09950-000, Brazil
Phone 55-11-3585-1100 Fax 55-11-3585-1187
<http://www.yaskawa.com.br>

YASKAWA EUROPE GmbH

Hauptstrasse 185, 65760 Eschborn, Germany
Phone 49-6196-569-300 Fax 49-6196-569-398
<http://www.yaskawa.eu.com>

YASKAWA ELECTRIC UK LTD.

1 Hunt Hill Orchardton Woods, Cumbernauld, G68 9LF, United Kingdom
Phone 44-1236-735000 Fax 44-1236-458182
<http://www.yaskawa.co.uk>

YASKAWA ELECTRIC KOREA CORPORATION

9F, Kyobo Securities Bldg., 26-4, Yeouido-dong, Yeongdeungpo-gu, Seoul, 150-737, Korea
Phone 82-2-784-7844 Fax 82-2-784-8495
<http://www.yaskawa.co.kr>

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151 Lorong Chuan, #04-02A, New Tech Park 556741, Singapore
Phone 65-6282-3003 Fax 65-6289-3003
<http://www.yaskawa.com.sg>

YASKAWA ELECTRIC (CHINA) CO., LTD.

12F, Carlton Bldg., No.21 HuangHe Road, HuangPu District, Shanghai 200003, China
Phone 86-21-5385-2200 Fax 86-21-5385-3299
<http://www.yaskawa.com.cn>

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE

Room 1011, Tower W3 Oriental Plaza, No.1 East Chang An Ave.,
Dong Cheng District, Beijing, 100738, China
Phone 86-10-8518-4086 Fax 86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

9F, 16, Nanking E. Rd., Sec. 3, Taipei, 104, Taiwan
Phone 886-2-2502-5003 Fax 886-2-2505-1280
<http://www.yaskawa-taiwan.com.tw>

YASKAWA INDIA PRIVATE LIMITED

#17/A Electronics City, Hosur Road Bangalore 560 100 (Karnataka), India
Phone 91-80-4244-1900 Fax 91-80-4244-1901
<http://www.yaskawaindia.in>



YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply. Specifications are subject to change without notice for ongoing product modifications and improvements.
© 2013 YASKAWA ELECTRIC CORPORATION. All rights reserved.

LITERATURE NO. KAEP C710656 05A
Published in Japan October 2013 13-9
13-4-12